

 
SIZE GUIDE - MX BOOT - US - EUR - JPN

Compare the measurement (in cm) of the longest part of the foot using the table below:
cross reference this value against the “**SHOE INSIDE LENGTH**”.
Then, from this column, check whether the measured length of the foot is greater than the value of the corresponding “**COMFORT SIZE**”.
If you have from same column “**SHOE INSIDE LENGTH**” < measured length of your foot < “**COMFORT SIZE**” you will have the correct shoe size to order.

SHOES INSIDE LENGTH (CM)	25,1	25,9	26,8	27,6	28,5	29,3	30,2	31,0	31,9	32,7	33,6	34,4
SHOES INSIDE LENGTH (INCHES)	9,88	10,19	10,55	10,86	11,22	11,53	11,88	12,20	12,55	12,87	13,22	13,54
COMFORT SIZE (CM)	24,3	25,1	26,0	26,8	27,7	28,5	29,4	30,2	31,1	31,9	32,8	33,6
COMFORT SIZE (INCHES)	9,56	9,88	10,23	10,55	10,90	11,22	11,57	11,88	12,24	12,55	12,91	13,22
US SIZE	5	6	7	8	9	10	11	12	13	14	15	16
EUR SIZE	38	39	40,5	42	43	44,5	45,5	47	48	49,5	51	52
JPN SIZE	24	25	25,5	26,5	27,5	29	29,5	30,5	31,5	32,5	33,5	34,5

A. SHOES INSIDE LENGTH
Example SIZE 9 (28,5 cm) / (11,22 inches)

B. COMFORT SIZE
Example SIZE 9 (27,7 cm) / (10,90 inches)

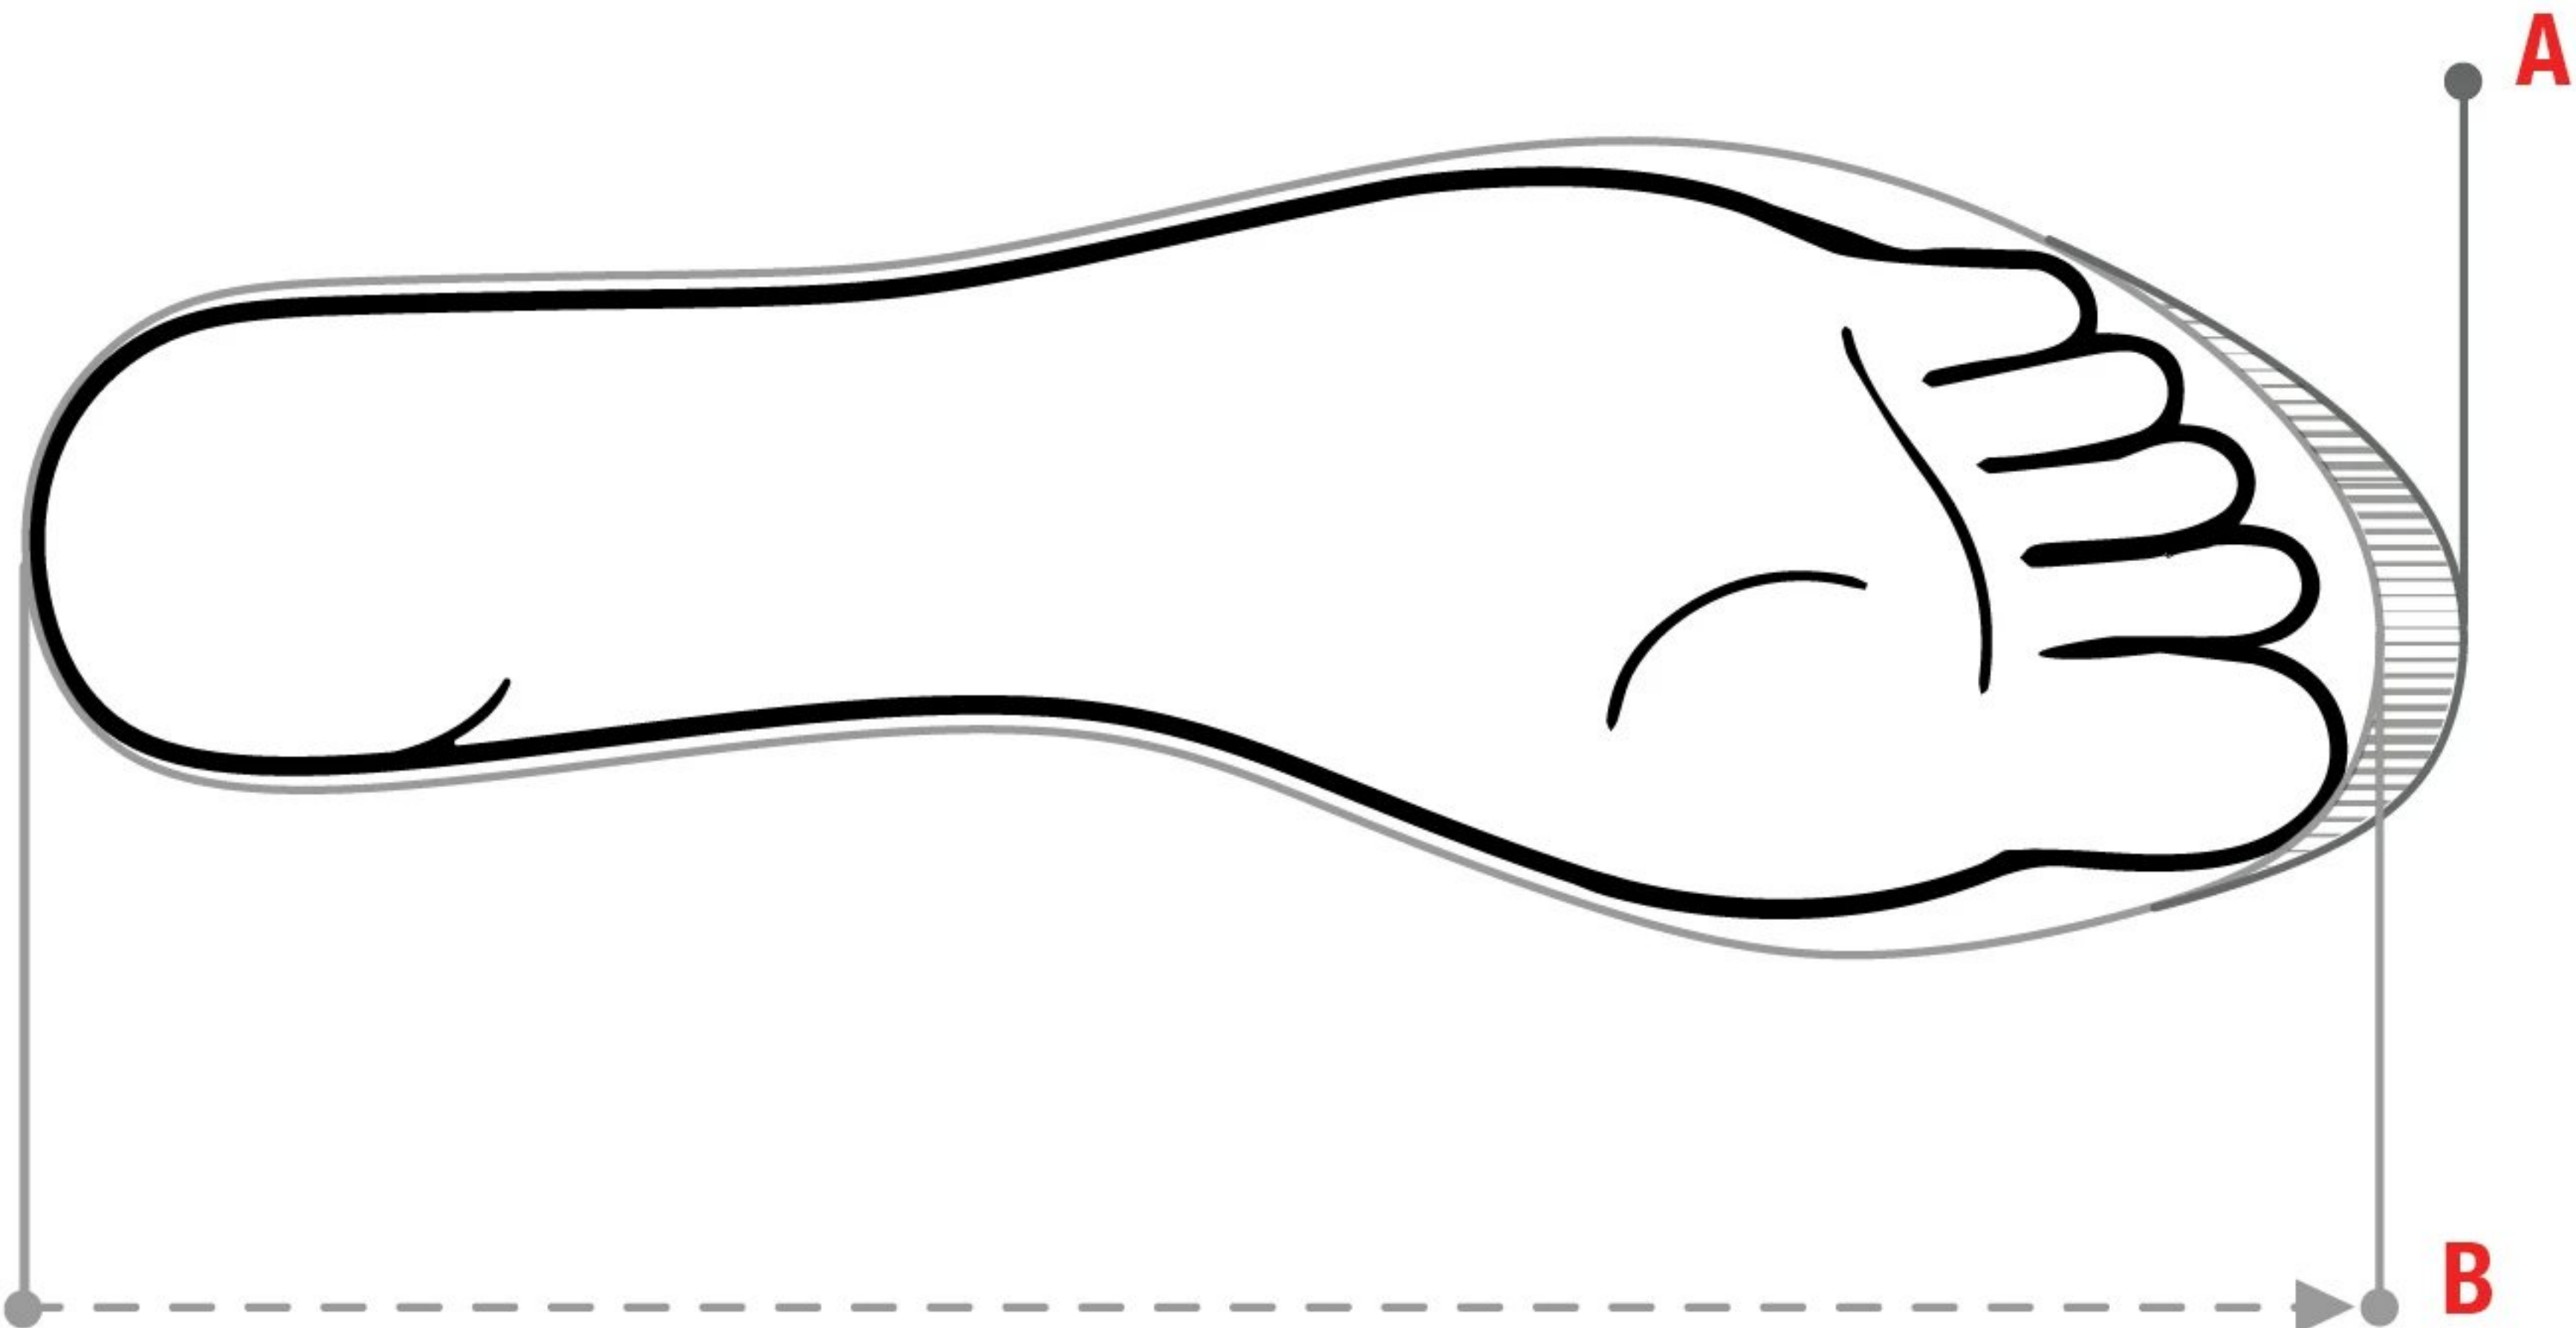


SIZE GUIDE - PERFORMANCE RIDING - SUPERTECH R ALL VERSION SMX PLUS v2 ALL VERSION - US - EUR - JPN

Compare the measurement (in cm) of the longest part of the foot using the table below:
cross reference this value against the “**SHOE INSIDE LENGTH**”.
Then, from this column, check whether the measured length of the foot is greater than the value of the corresponding “**COMFORT SIZE**”.
If you have from same column “**SHOE INSIDE LENGTH**” < measured length of your foot < “**COMFORT SIZE**” you will have the correct shoe size to order.

SHOES INSIDE LENGTH (CM)	25,8	26,5	27,2	27,8	28,5	29,2	29,8	30,5	31,2	31,8
SHOES INSIDE LENGTH (INCHES)	10,15	10,43	10,70	10,94	11,22	11,49	11,73	12	12,28	12,51
COMFORT SIZE (CM)	25,0	25,7	26,4	27,0	27,7	28,4	29,0	29,7	30,4	31,0
COMFORT SIZE (INCHES)	9,84	10,11	10,39	10,62	10,90	11,18	11,41	11,69	11,96	12,20
US SIZE	6	6½	7½	8	9	9½	10½	11½	12	12½
EUR SIZE	39	40	41	42	43	44	45	46	47	48
JPN SIZE	25	25,5	26	26,5	27,5	28,5	29,5	30	30,5	31,5

A. SHOES INSIDE LENGTH
Example SIZE 43 (28,5 cm) / (11,22 inches)

 B. COMFORT SIZE
Example SIZE 43 (27,7 cm) / (10,90 inches)

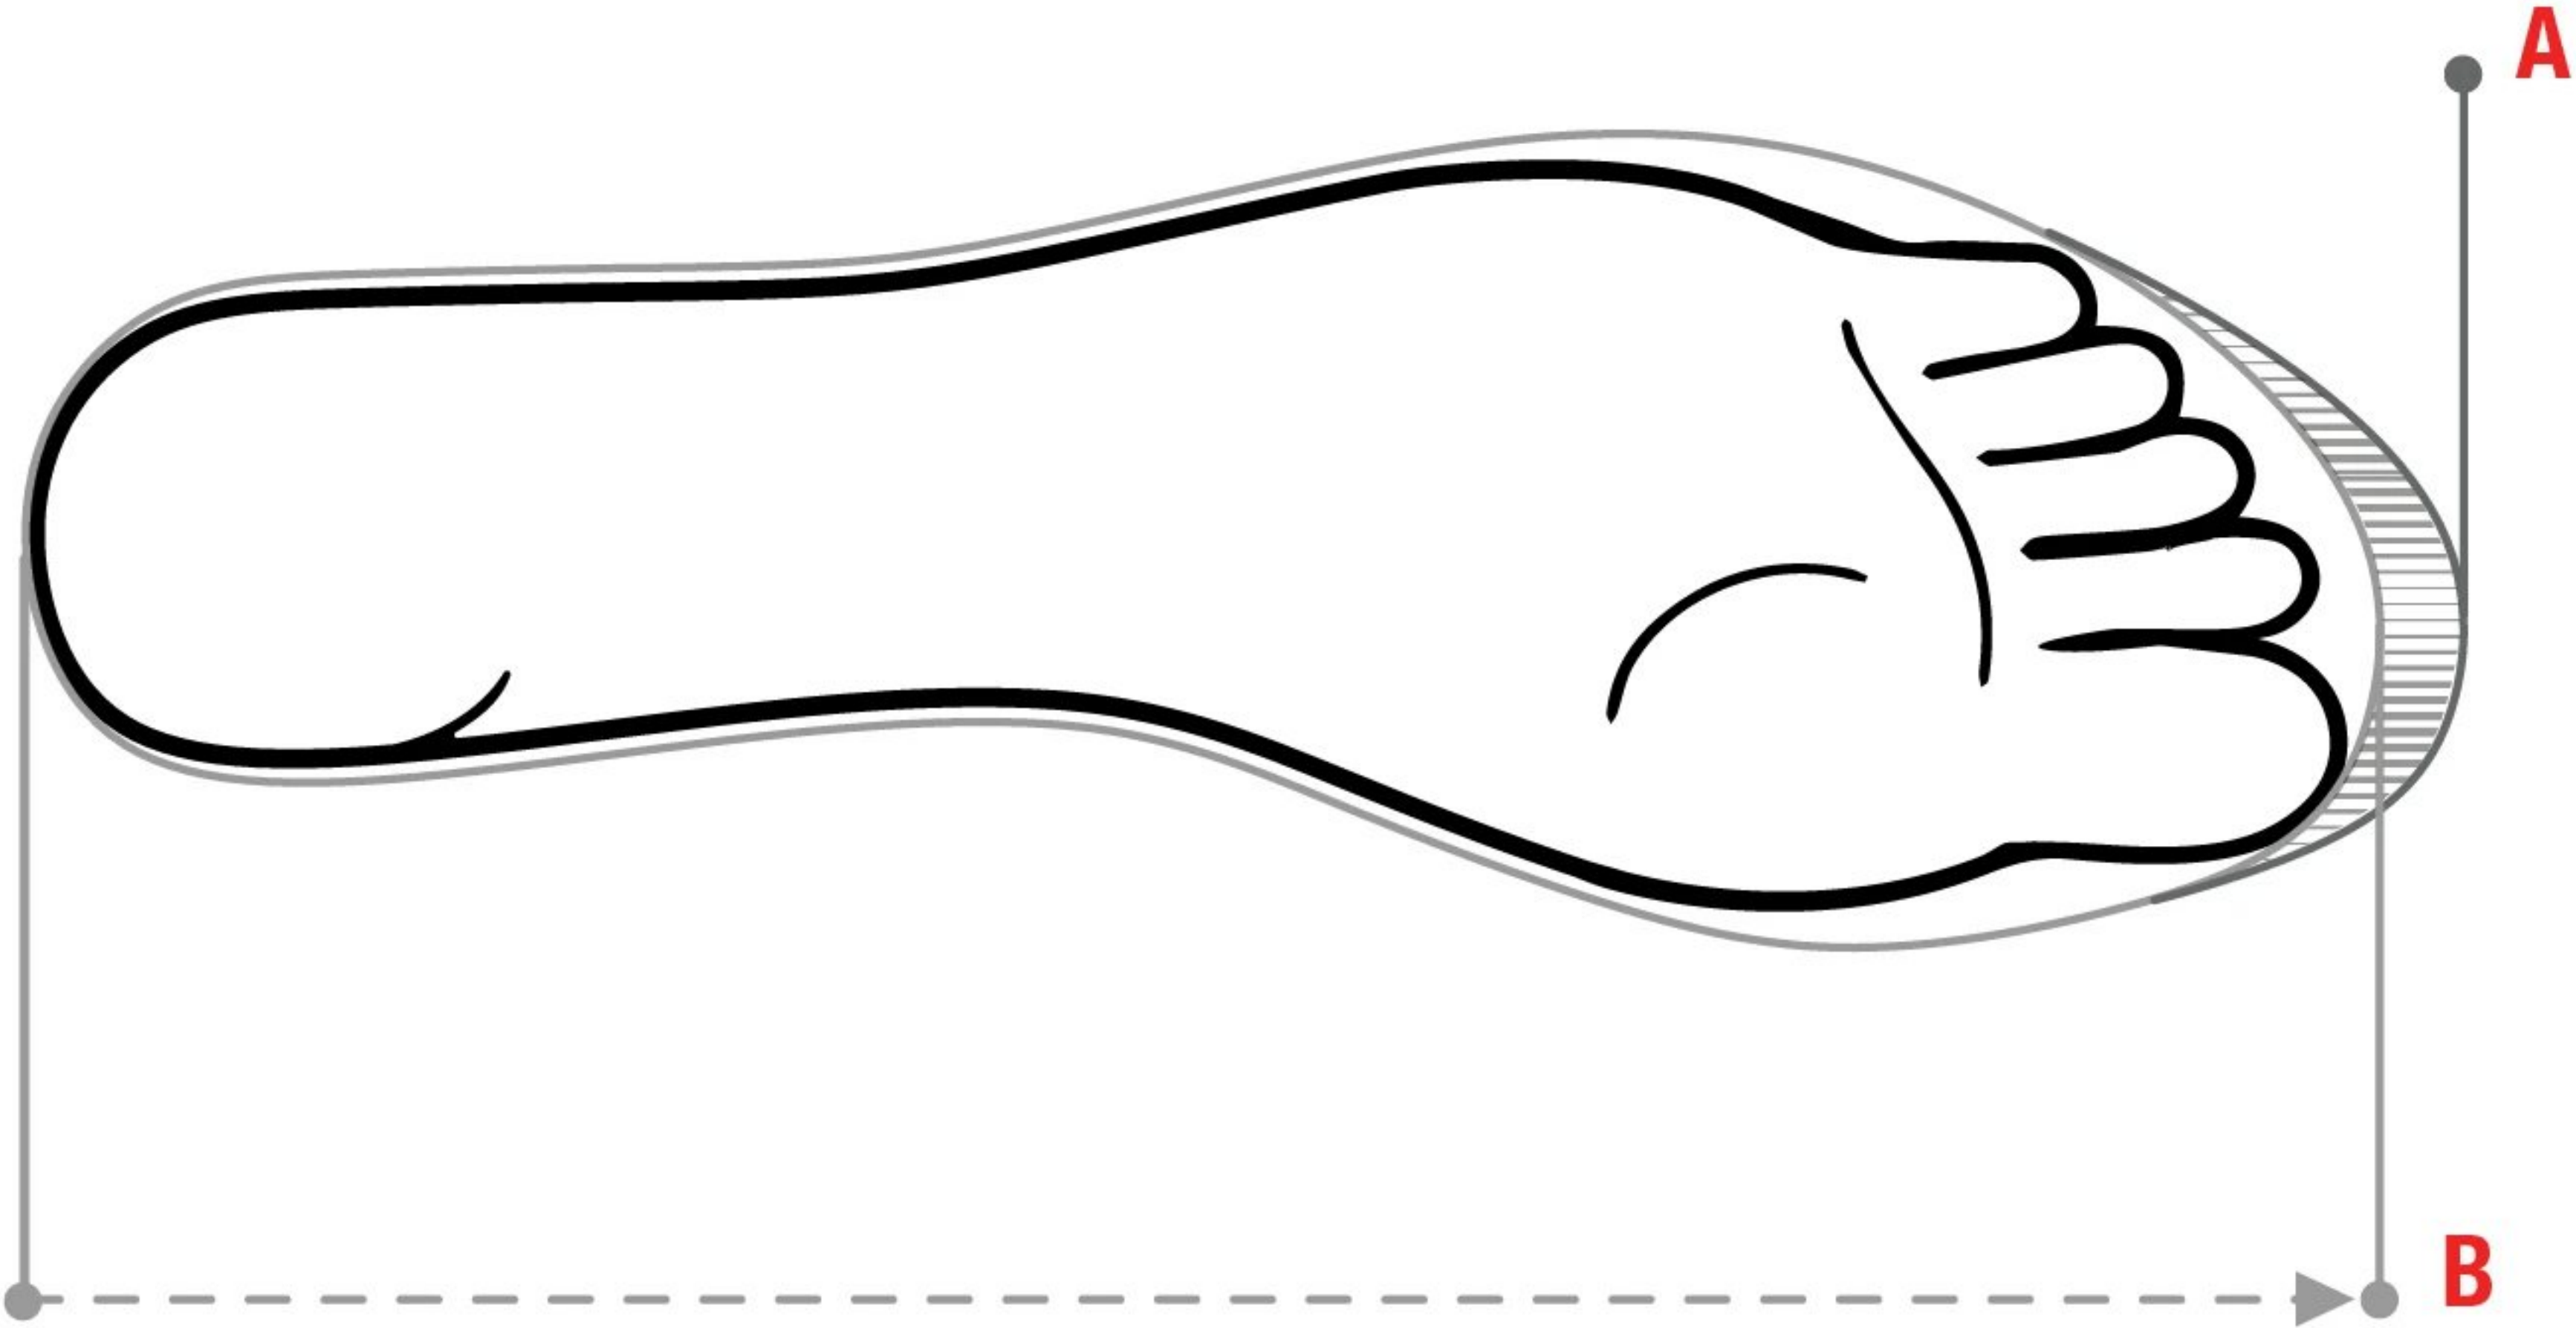

SIZE GUIDE - PERFORMANCE RIDING - SMX-1 R v2 ALL VERSION - SMX-6 v2 ALL VERSION SP-1 v2 ALL VERSION - US - EUR - JPN

Compare the measurement (in cm) of the longest part of the foot using the table below:
cross reference this value against the “**SHOE INSIDE LENGTH**”.
Then, from this column, check whether the measured length of the foot is greater than the value of the corresponding “**COMFORT SIZE**”.
If you have from same column “**SHOE INSIDE LENGTH**” < measured length of your foot < “**COMFORT SIZE**” you will have the correct shoe size to order.

SHOES INSIDE LENGTH (CM)	23,9	24,5	25,2	25,9	26,5	27,2	27,9	28,5	29,2	29,9	30,5	31,2	31,9	32,5	33,2
SHOES INSIDE LENGTH (INCHES)	9,40	9,64	9,92	10,19	10,43	10,70	10,98	11,22	11,49	11,77	12	12,28	12,55	12,79	13,07
COMFORT SIZE (CM)	23,1	23,7	24,4	25,1	25,7	26,4	27,1	27,7	28,4	29,1	29,7	30,4	31,1	31,7	32,4
COMFORT SIZE (INCHES)	9,09	9,33	9,60	9,88	10,11	10,39	10,66	10,90	11,18	11,45	11,69	11,96	12,24	12,48	12,75
US SIZE	3½	4	5	6	6 ½	7½	8	9	9½	10½	11½	12	12½	13½	14
EUR SIZE	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50
JPN SIZE	22,5	23	24	25	25,5	26	26,5	27,5	28,5	29,5	30	30,5	31,5	32	33

A. SHOES INSIDE LENGTH
Example SIZE 9 (27,5 cm) / (11,22 inches)

B. COMFORT SIZE
Example SIZE 9 (26,7 cm) / (10,90 inches)

